

Aer 5300



Trolley or wall mounted Alpha/Beta Continuous Air Monitor



Applications:

- for monitoring airborne radioactive substance (**LLRD**) activity concentrations and measuring radon / thoron equivalent equilibrium concentration (**EECRn & EECTh**) and/or potential alpha energy concentration (**PAEC**) at workplaces
- in nuclear facilities
- in the NORM industry
- in mining operations
- in nuclear medicine (Th-227, Ra-223 and Rn-219)
- For taking samples from ducts and chimneys of nuclear facilities

Features:

- continuous monitoring of breathing air for airborne long-lived radioactive aerosols (LLRD) and short-lived radon decay products
- assessment and minimization of inhalation hazards for workers
- alert workers to high levels of airborne activity
- spectroscopic separation of the nuclides and complete compensation of the natural radon background for the LLRD measurement
- menu navigation via touch screen
- all parameters relevant for reliable operation are continuously monitored and are part of the stored measurement data
- flexible alarm system (up to 32 thresholds)
- Single filter or filter roll for 330 steps or nearly 1 year at one filter change/day

Closer to your application

Detector type	400 ... 1 200 mm ² ion-implanted silicon detector option „G“: double Si-detector for dynamic gamma background compensation (2 x XX mm ² each detector)
Energy range	80-150 keV...2.5 MeV (beta) (depends on detector size) 2.5...10 MeV (alpha);
Counting efficiency	approx. 20 % (4 π)
Sampling	open face and closed sampling with automatic filter sealing for minimum collection losses
Filter /Stepper	membrane-filter tape (PTFE), 5 μ m pore size; length 30m, width: 65 mm, sufficient for >330 Filter changes deposition rate >99.9 % filter pressure mechanism for maximum tightness of the collecting device active filter test with respect to perforation and exhaustion fast, tool-less replacement of filter coils more than 12 months autonomous operation in “normal” environment configurable trigger for filter stepping (e.g. each sample interval, fixed period, filter exhaustion, activity detected) required period for filter replacement <2 s
Pump	built-in („Rn“- version) or extern oil-less, long-life, low noise quality rotary van pump (Becker) (extern) OR membrane type pump (intern) nominal air flow 35 SLPM (adjustable range 8 to 50 SLPM depending on pump type and instrument version) processor controlled air flow for constant deposition conditions (mass flow sensor) pressure drop across the filter 15...100 mbar (at 35 SLPM) noise emission approx. 60 dBA (in 1 m distance) other vacuum supplies may be connected instead of the pump
Weight of ext. pumps	VT4.4 – 8.5 kg (4.1 m ³ /h) VT4.8 – 10.25 kg (8.0 m ³ /h)

Results	<p>exposure for alpha and beta emitters (LLRD) in Bqh/m³</p> <p>dose for Alpha and Beta emitters in μSv or DAC-hrs (dose coefficients adjustable by user)</p> <p>detection of Natural Uranium with automatic selection of the U_{nat} dose coefficient</p> <p>average activity concentration for Alpha and Beta emitters in Bq/m³</p> <p>(E)quilibrium (E)quivalent (C)oncentration (EEC) for radon and thoron daughter products in Bq/m³</p> <p>(P)otential (A)lpha (E)nergy (C)oncentration (PAEC) for radon and thoron daughter products in nJ/m³</p> <p>separate channel for alpha gross counting in cps or Bq</p> <p>option: gamma dose rate in μSv/h (up to 100 mSv/h)</p> <p>temperature, humidity, pressure, battery voltage</p> <p>flow rate, filter exhaustion rate, filter stepping, end of filter tape</p>
Standards	<p>IEC 60761-1</p> <p>IEC 60761-2</p> <p>IEC 61578</p> <p>IEC 61577-3</p> <p>IEC 1263</p> <p>CE,VDE</p> <p>DIN ISO 16639 (VDE 0493-1-6639)</p>
Compensation	<p>compensation of natural Radon background by Alpha spectroscopy with dynamic fitting of peak shape with respect to progressive filter exhaustion</p> <p>upper alpha energy threshold for LLRD = 5.6 MeV</p> <p>static compensation of gamma background</p> <p>option: dynamic compensation of gamma background by double detector should be ordered separately</p> <p>dynamic shock rejection (mechanical shock) by pulse signal shape analysis</p>
LLRD Sensitivity	approx. 25 cpm/(Bqh/m ³)
Measuring range	0 ... 10 000 Bqh/m ³ (0 ... 50 000 DACH(Pu)) 0.6 MBq/m ³ over 1 minute

Closer to your application

Measurement	up to 16 user definable sampling cycles (1 s to 1 year) predefined sampling cycles 1, 5, 15, 60 minutes predefined test cycles
Detection limits	see tables below
Alert indication	Up to 32 configurable alert thresholds for all measured values alert tower with green, yellow and red light, 360° visible 90 dB at 1 m signal buzzer alert indication on the display alert reset is configurable (either with confirmation by the user or automatic reset if the alert condition is no longer present) pre-defined alerts for LLRD activity, low/high count rate, filter perforation, end of filter tape events log (up 100 events)
Data storage	32 GB SD-card (> 2 000 000 data records) storage of all measured raw data incl. spectra
Operation / Display	Colour touch screen 6 cm x 9 cm (4.5"); Graphic 240 x128 high contrast even in direct sunlight backlight key switch intuitive, straight forward menu structure
Interfaces	USB, RS 232, 2x analog outputs (4-20 mA), 2x RS 485 (one with ModBus RTU), 2x AUX. Two interfaces can be working at the same time
Power supply	230 VAC / 50 Hz (option 110 VAC / 60 Hz) approx. 500 VA internal NiMH-buffer battery 12 V / 3.8 Ah for more than 12 h operation in case of mains power interruption (without pump)
ATEX category	no
Housing	stainless steel IP 54 ease for decontamination
Versions	wall mounted or trolley
Dimensions	540 mm x 360 mm x 200 mm (wall mounted cabinet) <18 kg approx. 1350 mm x 450 mm x 450 mm (with trolley and pump) 35 - 43 kg depending on exact configuration
Environmental conditions	
Temperature	0 ... 50 °C
Rel. humidity	5 ... 95 % rF. non-condensing
Bar. pressure	800 ... 1100 mbar

Software dVISION	remote control data transfer, visualization data management, export to text files system configuration creating / editing of measurement cycles network management
Additional options (on request)	separate filter unit (connection by hose and cable) G-M probe for dose rate measurement (up to 1 or 100 mS/h) electrical servo valve for flow regulation (wall-mounted version, for working with a vacuum supply provided by the customer)
Calibration /Test	factory calibration in a radon progeny atmosphere with aerosol generator test sources Am-241 (Alpha) and Cs-137 (Beta); recommended are area sources with 25 mm or 36 mm diameter and 1 kBq nominal activity such as Eckert & Ziegler AMRB22757/CDRB22758 (d 30 mm x 0.8 mm) flow rate check on top of the filter using adapter dome and low differential pressure air flow meter ($\Delta p < 15$ mbar @35 l/min)

Closer to your application

Detection Limits

The detection limits stated in the tables below are valid for following operational conditions:

- flow rate = 35 l/min
- $k_{1-\alpha} = 3$ (99.8 %)
- $k_{1-\beta} = 1.65$ (95 %)
- 1DAC(Pu) = 0.2 Bq/m³ (10CRF835)
- 1DAC(Sr90) = 200 Bq/m³ (10CRF835)

Additionally for beta measurement:

- $F = 0.6$
- gamma background = 0.1 μ Sv/h

The assumption for the detection limit of the concentration is a momentarily step-like increase of air activity concentration up to the detection limit at the beginning of a sampling interval. Furthermore, it is presumed that there was no LLRD activity deposited on the filter.


Alpha LLRD									
Po-218 *)	Detection limit T = 1 min			Detection limit T = 5 min			Detection limit T = 15 min		
Bq/m ³	Bqh/m ³	DACH	Bq/m ³	Bqh/m ³	DACH	Bq/m ³	Bqh/m ³	DACH	Bq/m ³
10	0.92	4.6	55	0.38	1.9	4,6	0.22	1.1	0.9
20	1.25	6.2	75	0.54	2.7	6,5	0.33	1.6	1.3
50	1.92	9.6	115	0.88	4.4	10,6	0.58	2.9	2.3
100	2.70	13.5	168	1.33	6.7	16,0	0.95	4.7	3.8

Beta LLRD									
Po-218 *)	Detection limit T = 1min			Detection limit T = 5min			Detection limit T = 15min		
Bq/m ³	Bqh/m ³	DACH	Bq/m ³	Bqh/m ³	DACH	Bq/m ³	Bqh/m ³	DACH	Bq/m ³
10	2.75	0.014	165	1.21	0.006	14.5	0.69	0.004	2.8
20	3.74	0.019	224	1.65	0.008	19.8	0.95	0.005	3.8
50	5.76	0.029	345	2.55	0.013	30.7	1.47	0.007	5.9
100	8.06	0.040	483	3.58	0.018	43.0	2.06	0.010	8.3

*) The activity concentration of Po-218 is always less than the one of Rn-222

Possible modifications of Air Monitor Aer 5XX0-XXXX

Aer 5XX0-XXXX

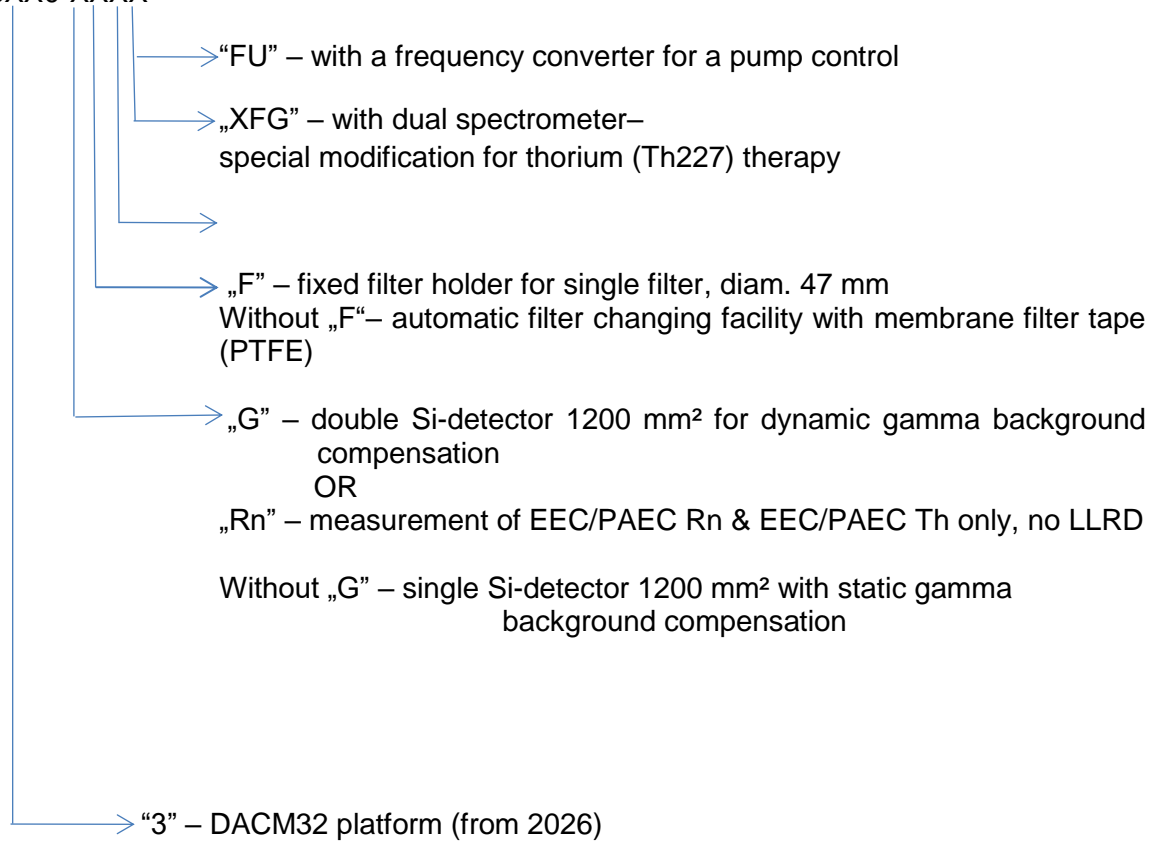

*) options XFG and G cannot be combined

